



Rotary Hoe (Soil Cultivator) – Instructions for Use

HireKING

SAFETY FIRST

If you are collecting the equipment for someone else, please make sure this sheet is given to the equipment user to read. This sheet should be given to the site supervisor if the equipment is being hired for commercial use so that the information is available to all users. Before starting any job, be sure to spend a few minutes planning and understanding the hazards and risks of the activity and determining how you will control them to prevent injury or damage.

<p>Note: This safety and instruction sheet is on the main machine only, you will be issued with additional sheets for the attachments you have.</p>	<p>REQUIRED SAFETY EQUIPMENT</p> 
	<p>Starting Procedure</p> <ol style="list-style-type: none">1. Turn fuel tap to on2. Turn ignition switch to run3. Engage choke4. Move throttle to start position5. Make sure the transmission is in neutral (if applicable)6. Pull starter briskly to start the engine7. Disengage choke and allow the engine to warm up
<p>Pre-Start Checks and Safety</p> <ul style="list-style-type: none">• Ensure fuel tank is full (straight petrol)• Check engine oil is up to required mark• Check transmission oil level• Check condition of tines• Ensure area to till is free of all rubble and debris• Keep children clear of working area• Stop engine to refuel• Do not spill fuel• Keep hands and feet clear of tines while machine is running• Stop engine to clear tines• Don't touch hot engine	<p>When Operating</p> <ul style="list-style-type: none">• Adjust tilling depth lever to the desired depth <p>Note: The clutch is engaged by pulling in the clutch lever and disengaged by releasing the lever (this starts and stops the tine rotation)</p> <ul style="list-style-type: none">• Increase engine speed to the desired position• Should the machine jerk forward while tilling, press down on the handlebars
	<p>Stopping and After Use</p> <ol style="list-style-type: none">1. Disengage clutch (release the lever)2. Select neutral (if applicable)3. Move throttle lever to idle4. Turn the ignition switch to off5. Turn fuel tap off
<p>CONTACT US</p> <p>If you are having any difficulties with this piece of machinery/equipment, please contact us immediately on 0800 30 30 20 follow the options to General Hire.</p>	